



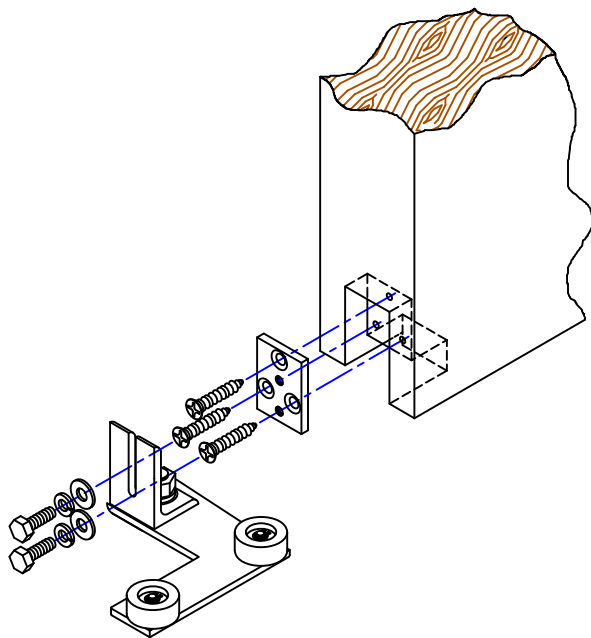

ISOMETRIC VIEW OF INSTALLATION OF
SWAY GUIDE INTO BOTTOM OF DOOR
(NOT TO SCALE)

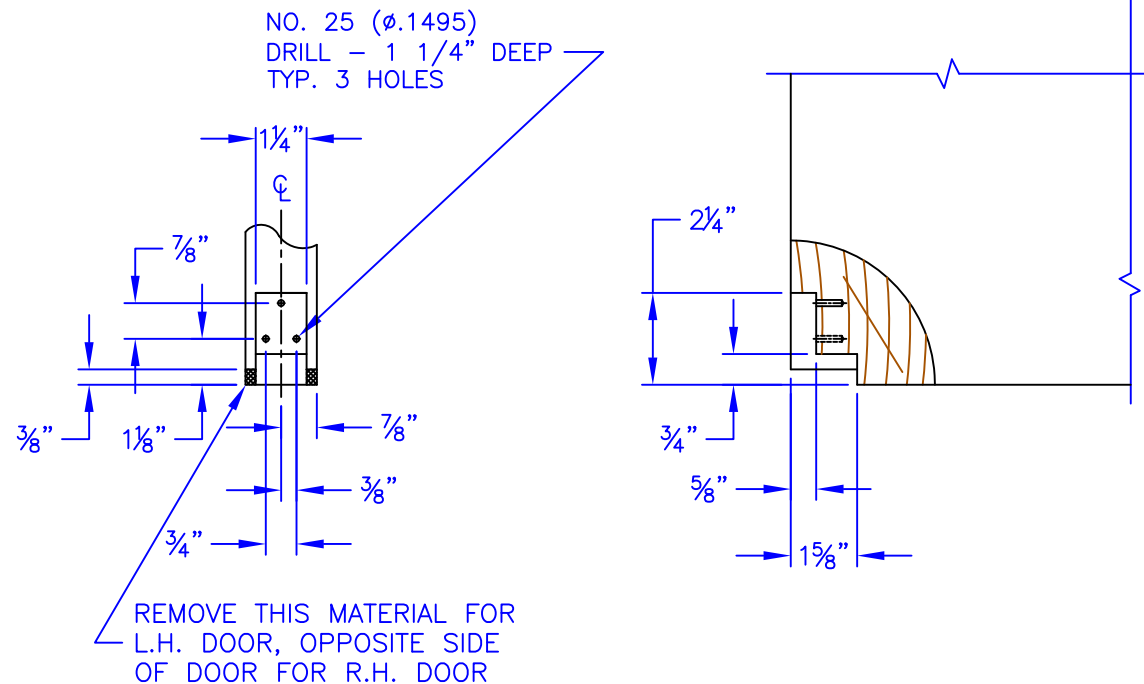

NOTES:

1. ALL INSIDE CORNERS OF MORTISES TO BE SHARP AS SHOWN.
2. DOOR VIEWED FROM INTERIOR SIDE.

record-usa <i>a member of the record group</i>			
4910 STARCREST DRIVE (28110) P.O. BOX 3099 MONROE, NC 28111-3099 U.S.A. PHONE: (704) 289-9212 TOLL FREE: (800) 438-1937 FAX: (704) 289-2024			
TITLE SERIES 5100 SLIDING ENTRANCE SYSTEM DOOR PREP. FOR BOTTOM SWAY GUIDE FOR WOOD SLIDING DOORS (BY OTHERS)			
DATE 9/18/97 BY RP		DO NOT SCALE DRAWING	
		DWG. NO.	